

I'm not a robot 
reCAPTCHA

Open



7.2 FM transmission setting (Option exclusive only some models - specified on the product packaging)

FM transmission main function is output audio of navigator to the FM reception equipment, click the "volume setting interface" button , and enter into "FM transmission setting interface", as shown in 8-3 picture.

[Note]: Navigator FM transmitting frequency must be the same with the reception equipment's received frequency; Do not use has broadcasting station's frequency, in order to avoid the broadcasting station signal and the navigator signal disturb mutually.



 Close	Click to quit the frequency adjusting application.
 Frequency -	Click to decrease the frequency in one grade (per grade: 0.1MHz).
 Frequency +	Click to increase the frequency in one grade (per grade: 0.1MHz).
 Start FM function	Select express FM transmission function starting, contrary express closing.
 Current frequency	Show the current frequency of FM.

7.3 Brightness Setting

The back light setting is to adjust the brightness, as shown in Figure 7-3:



Figure 7-3: The setting of brightness interface

60

15/06/2014 12:13:10

GR033_GP039_manual_hardware_V3_RV0_CV.indb 60





2020-8-2 · A sua última visita foi em 24 Mar 2022, 03:03. Bem-vindo: 24 Mar 2022, 03:03